



# A2K Player

---

User Manual v1.4

# Safety Precautions

Before use of the equipment, please read all safety precautions to ensure safe and correct use of the product!

## **1.1 Do not open the cover**

In order to prevent personal accidents, people rather than the Company's technical personnel may not open the upper cover of the equipment.

## **1.2 Please use the power supply and accessories approved by the manufacturer**

The power supply of this product supports DC 5V-12V power input. Please use the power adapter attached with the package of this product.

## **1.3 Avoid all functional interfaces from contacting live objects**

This product is an electronic product. If the functional interface contacts a live object, it may cause damage to the circuit components, thus affecting normal use of the product.

## **1.4 Keep away from inflammable, explosive and other dangerous goods**

Keep away from inflammables and explosives. Do not use this product in inflammable and explosive environment!

## **1.5 This product does not support waterproof design. Do not directly have it contact liquid or use it in humid environment**



## Safety Protection Measures

In all installation processes of networking player, please follow the safety rules to avoid personal injury and equipment damage.

## Unpacking and Inspection

After unpacking, check the items according to the packing list in the box. Please contact the salesman in time if you find the accessories are incomplete.

# Appearance

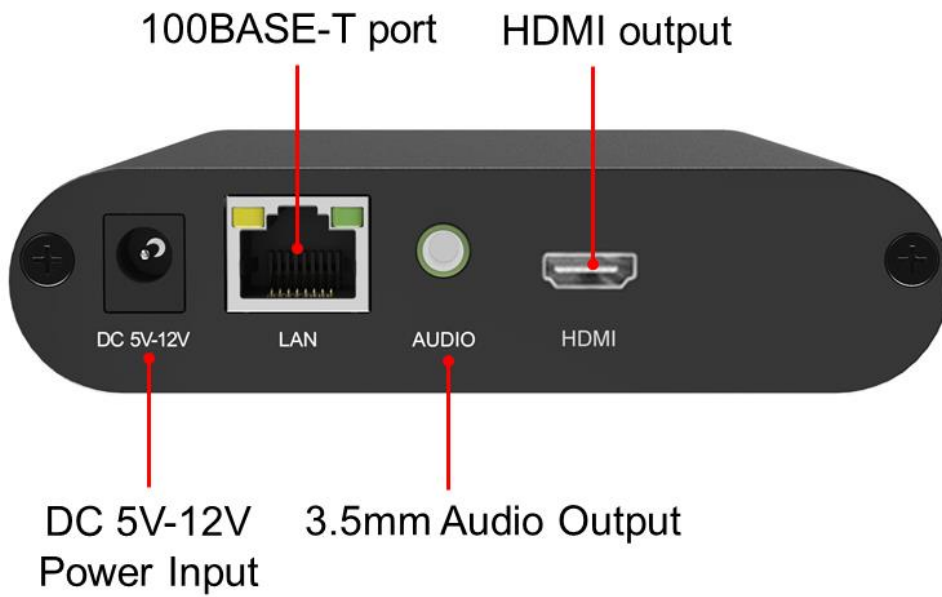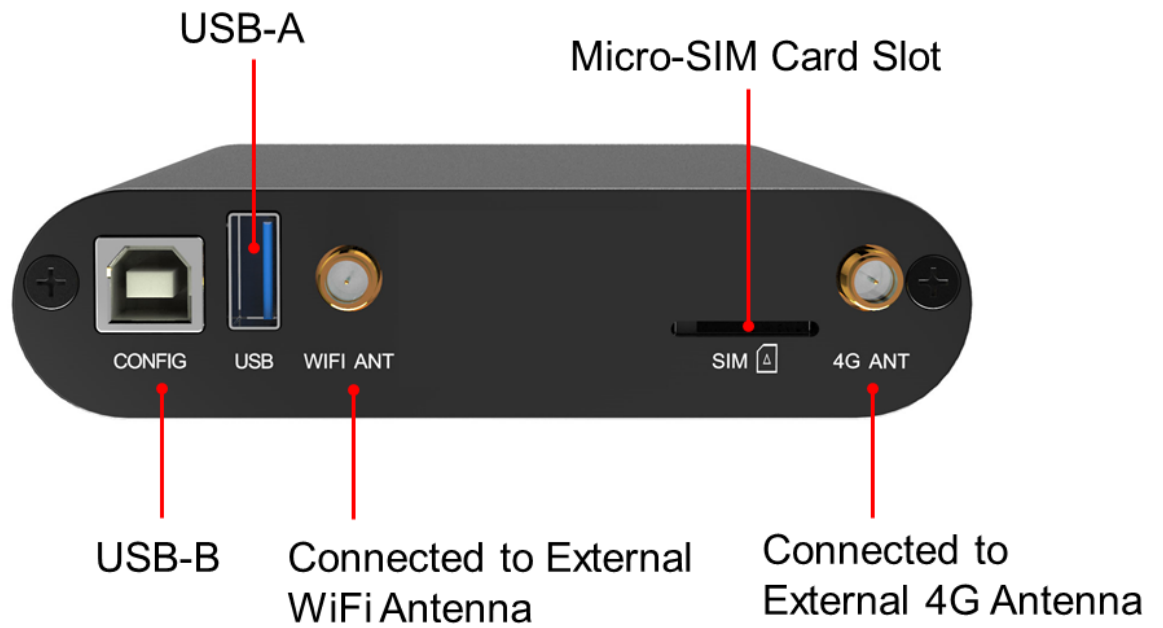

# Quick Start Guide

You can learn how to use the player after you master the following three steps:

**Step 1:** Properly connect the player with the LCD.

**Step 2:** Configure player parameters.

**Step 3:** Edit and publish programs.

Notes:

1. For detailed configuration, please refer to the next section.
2. Users can download the supporting software from our official website: [www.colorlightinside.com](http://www.colorlightinside.com) [Support] → [Downloads].
3. LAN encryption function is enabled by default, with the initial password is Console@123, it is recommended to update with a stronger password.

## Detailed Setup Steps

**Step I:** Properly connect the player with the LCD.




## Step II: Configure player parameters.


Standalone players do not need network configuration.

In LAN mode, you can select a network connection method from LAN, WiFi and WiFi hotspot for configuration. In cloud mode, you can select a network connection method from LAN, WiFi and 4G for configuration.

### 1. Configure network parameters

To configure network parameters, do the following:

- ① Connect the player with the computer via USB cable.
- ② Open PlayerMaster software, and select the device connected to the USB port.
- ③ On the Device page, click the network setting icon  to enter the following interface (Take LAN as an example, the player will automatically obtain IP address after connecting to Ethernet cable), and then click **Apply**.

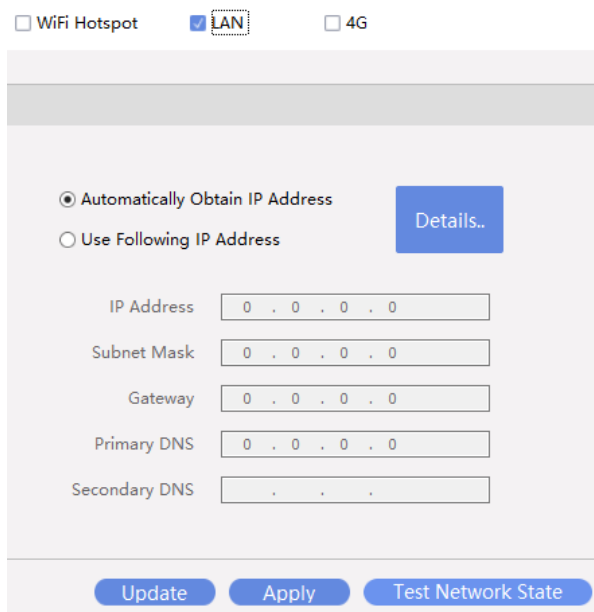

After setting, you can produce and publish programs, and manage the device via this communication method.

## 2. Configure other parameters of the player

Other functions: viewing schedules, brightness settings, volume settings, time settings, power settings, device language settings, advanced settings.



## Step III: Edit and publish programs

1. On the **Program** page, click **+Add** , and set program resolution (the same as screen resolution generally), and then click **OK** to enter the **Program Editor** window.



Program	Programs can be separately sent to the player for playing.
Page	If you want different window layouts in the same program, you can set the layouts in different program pages.
Window	You can add more than one window to one page. The content of windows on the same page will play simultaneously. You can set the layout of a program by adjusting the location and size of windows.
Items	It refers to the content displayed on the LCD display, including the video, picture, Gif, text file and Office file.


\* Program pages in the same program and contents in the same window both play successively, while contents in different windows on the same program page play simultaneously.

2. Click **+** to add different types of windows.

No.	Program Type	Content Description
1	File window	Video, picture, Gif, Txt, RTF, Office (Word, Excel, PPT).
2	Single-line text	Txt document, manual editing and input.
3	Single-Column text	Txt document, manual editing and input.
4	Multi-line text	Txt document, RTF document, Word document, manual editing and input.
5	Global Weather	Weather in global cities.

6	Environment	Temperature, humidity, smoke, noise and air quality.
7	Analog Clock	Round image clock.
8	Digital Clock	Digital timing clock.
9	Timer	Count-up or down timer.
10	Webpage	Manually enter the website.
11	Stream Video	Program on the streaming medium website.
12	RSS	News subscription.
13	Video Capture	Display the images captured by an external camera.

3. Select different windows and items that you wish to add to your program. After editing the program, click  to save the program, and click  to publish the program. After sending the program, the LCD display will display the content you have just published.

Program		Program Schedule	Command Schedule			
Name	Device/Gro...	Size	Comple...	Progress	Date Published	
New Program 1		819.4 KB	819.4 KB	100%		2020-11-26 20:09:34

# Statement

Copyright © 2024 Colorlight Cloud Tech Ltd. All rights reserved.

Without the express written permission of Colorlight Cloud Tech Ltd., no unit or individual may copy, copy, transcribe or translate part or all of the contents of this book. Not to be used for any commercial or profit-making purposes in any form or by any means.

This guide is for reference only and does not constitute a promise of any kind. Please refer to the actual products (including but not limited to colour, size, screen display, etc.).

Service Phone

**4008 770 775**

**Colorlight Cloud Tech Ltd.**

Official Website: [www.colorlightinside.com](http://www.colorlightinside.com)  
Head Office Address: Room 37F-39F, Building 8, Zone A,  
Shenzhen International Innovation Valley, Vanke Cloud City, Dashi Yilu,  
Nanshan District, Shenzhen, China

